


Install Guide for Acoustic Laminate Underlay

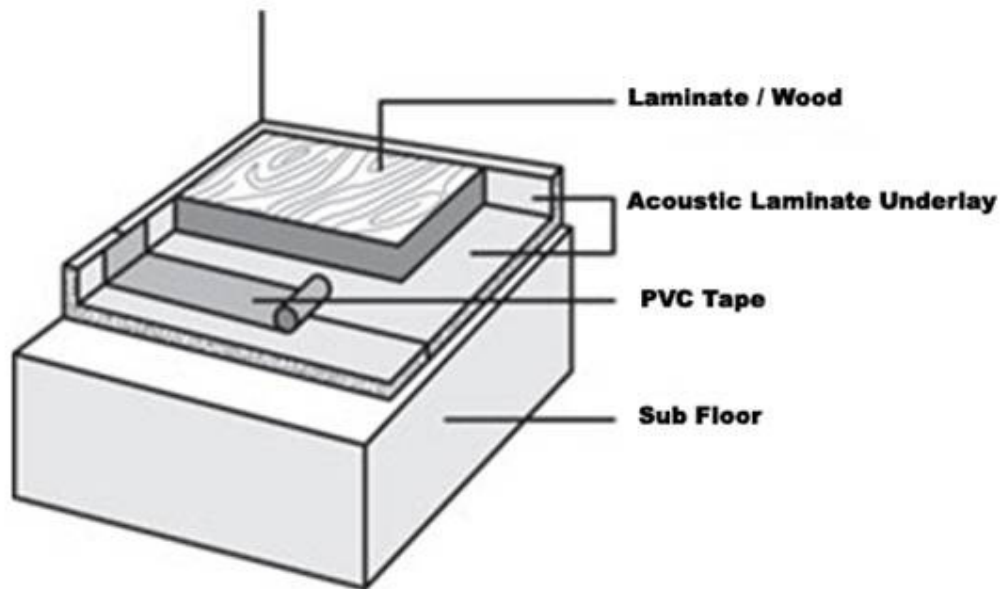

1. The subfloor must be level, sound, dry and free from dust, grease and other contaminants. It must be free from excessive moisture with a relative humidity not exceeding 75% (in accordance with BS5325). A hygrometer test should be performed in all new buildings to check for excessive levels of humidity.
2. The Acoustic Laminate Underlay should be laid foil side down (essential to ensure maximum resistance to moisture from the subfloor) with each roll of underlay closely butted-up. The underlay should be trimmed-in flush to the walls.
3. Tape all joins with our PVC Tape and press firmly into place.
4. Once the flooring has been fully laid, trim the underlay to the top of the flooring, fit skirting or quadrant to finish.
5. PVC tape used in conjunction with a recommended underlay creates a new, moisture-resistant subfloor onto which the wood or laminate flooring is fitted.



EST. 1969

Crawley Mill, Dry Lane, Witney, Oxfordshire, OX29 9TJ
sales@soundservice.co.uk

VAT NO: GB 434 5018 73 REG NO: 960986

Tel: 0845 363 7131
Fax: 01993 779569