

## **Install Guide for Lite Laminate System**

BE SURE TO READ THESE INSTRUCTIONS THOROUGHLY BEFORE COMMENCING ANY WORK

**NOTE. THESE INSTRUCTIONS MUST BE FOLLOWED OTHERWISE INCORRECT INSTALLATION COULD OCCUR WHICH MAY HAVE A DETRIMENTAL EFFECT ON THE PERFORMANCE!**

### **Step 1.**

Remove all existing floor coverings

### **Step 2.**

Check to see if the floorboards are tongued and grooved by inserting a thin bladed knife between the joints. If the knife goes all the way through the floorboard joints will be square edged and should be sealed with our Acoustic Sealant (optional extra) before commencing with the rest of these instructions.

*If the floor to be insulated is concrete then ignore the instruction above.*

### **Step 3.**

Using our supplied special aerosol contact adhesive, bond the first layer of 2mm SBM5 soundproofing mat to the floor. The adhesive has an adjustable nozzle so it is usually better to select the widest spray pattern by turning the nozzle so it aligns with the symbol and usually marked H at one o'clock to the nozzle. The other settings are M and L for medium and low spray pattern. (See application instructions on side of can). Spray the soundproofing mat and then spray an appropriate area on the floor and immediately fix it down taking care to position it correctly. Continue to install the soundproofing mats across the entire floor surface wall to wall ensuring the edges are tightly butted together. If gaps occur they should be kept as small as possible.

If a permanent fixing of this layer of soundproofing mat is not desired onto a timber suspended floor, then it can be nailed down with felt nails.

### **Step 4.**

Now install the second layer of 2mm mat ensuring the joints are overlapping the joints of the first layer. This layer can be glued down using the adhesive previously described if preferred or nailed.

**EST. 1969**

**Crawley Mill, Dry Lane, Witney, Oxfordshire, OX29 9TJ**

**sales@soundservice.co.uk**


VAT NO: GB 434 5018 73 REG NO: 960986



**Tel: 0845 363 7131**

**Fax: 01993 779569**

**Step 5.**

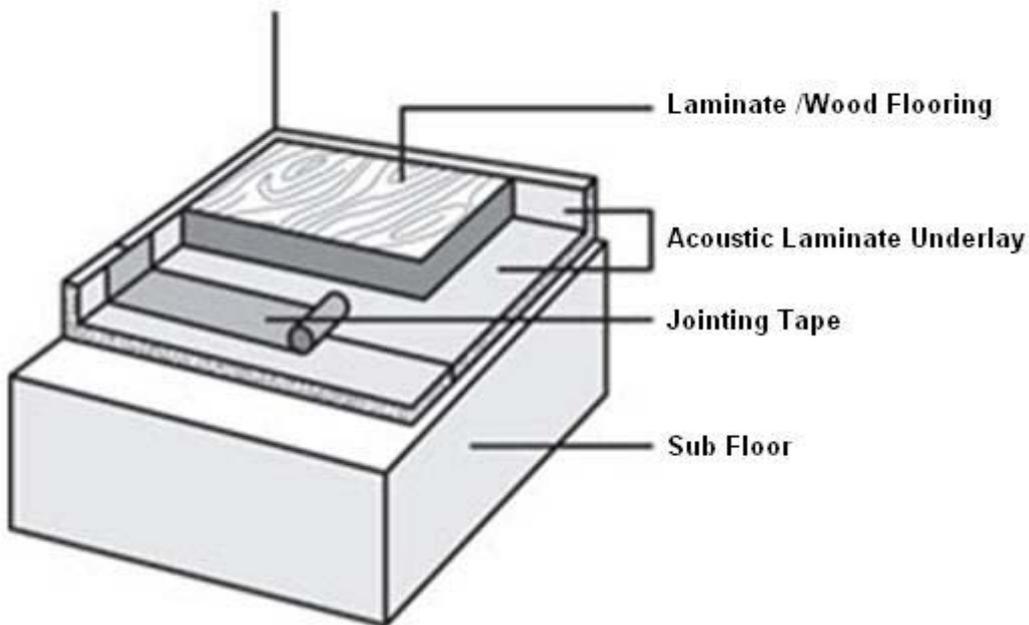

The Acoustic Laminate Underlay should be laid foil side down (essential to ensure maximum resistance to moisture from the subfloor) with each roll of underlay closely butted-up. The underlay should be trimmed-in flush to the walls. Do not use nails for this layer!

**Step 6.**

Tape all joins with our Jointing Tape (Supplied) and press firmly into place.

**Step 7.**

The floor covering can now be installed according to the manufacturers instructions. The sound insulating treatment that has been installed will be suitable for most laminate floors and will not require any additional laminate flooring underlay.

**NOTES**

*This work can easily be undertaken with the minimum of tools. The main tool required will be a craft knife with a sharp blade.*

**JOB'S DONE!**

If you have any difficulty with the installation or require any additional advice, please contact our Technical department on 0845 363 7131

**The contractor shall be responsible for the examination and acceptance of all conditions and project suitability prior to the installation.**