


Install Guide for SA25FF/B/6

The film facing on our foams is there to provide protection from dust and fluid ingress and should always be installed with the film face topside and the adhesive applied to the opposite side. (See diagram)

All of our acoustic foams should be installed using our special aerosol adhesive that should be used according to the instructions on the tin.

If there is likely to be very much fluid affecting the product, the cut edges will have to be protected. This can be done by sealing them with silicone or a similar robust and flexible material or by compressing the edge by fixing a rigid strip of some description along each cut edge so that the edge is fully compressed.

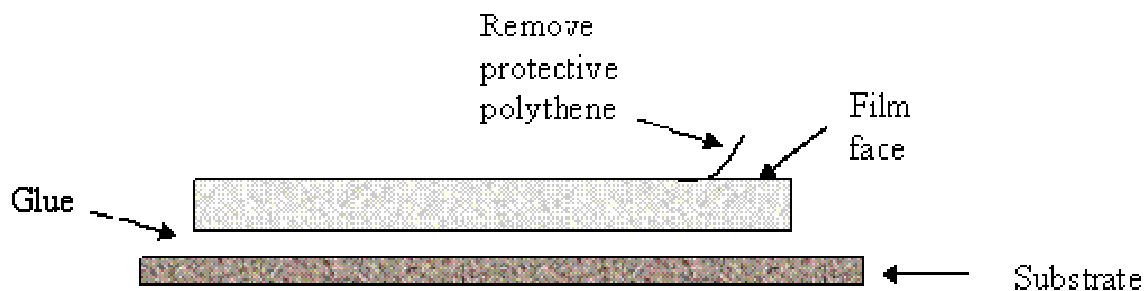

NOTE. Some of our film faced material has a polythene film protecting it. This film should be removed prior to installation otherwise the sound absorption of the product will be adversely affected.