

FIXING GUIDE FOR CLOUDSORBA ACOUSTIC PANELS USING SPIRAL HOOKS



Installation :-

Step 1 – Use clean white gloves to keep the panels free of any dirt marks during installation. Mark the appropriate number of positions on the back of the panels for the spiral hook to evenly support the acoustic panel.



Step 2 – Screw the appropriate number of spiral hooks into the marked positions through the back of the acoustic panel.



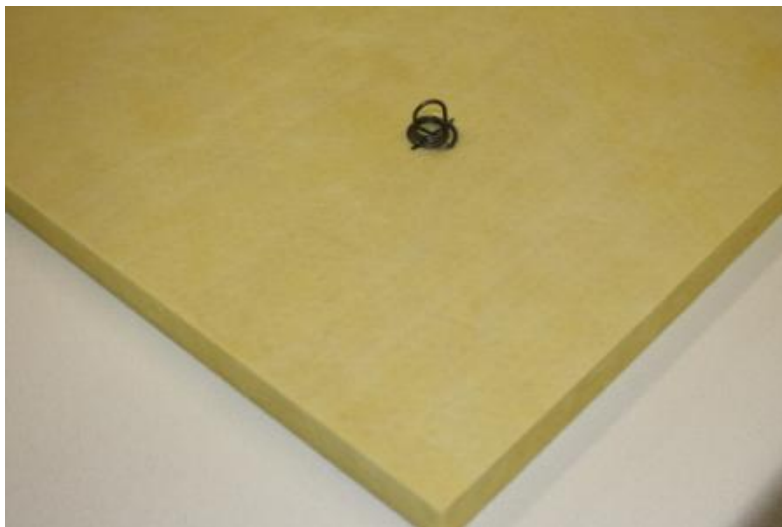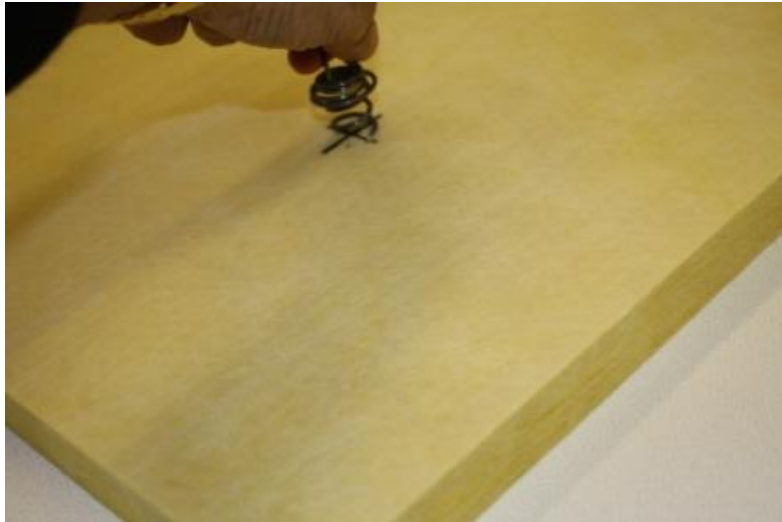



Step 3 – Install appropriate fixing bolts on the structural ceiling and align them with the position of the spiral hooks on the rear of the acoustic panels.

Eye Bolt



Tie Wire Bolt



Step 4 – Use the appropriate steel cable or chain to hang the panels from the structural ceiling fixings and to the spiral hooks at the rear of the panels.



Step 5 – Adjust the height of the cable or chain to suit the depth of suspension required and ensure that the panels are horizontal and level using spirit level.