


DRUM SET ANTI-VIBRATION MAT KIT

Contents

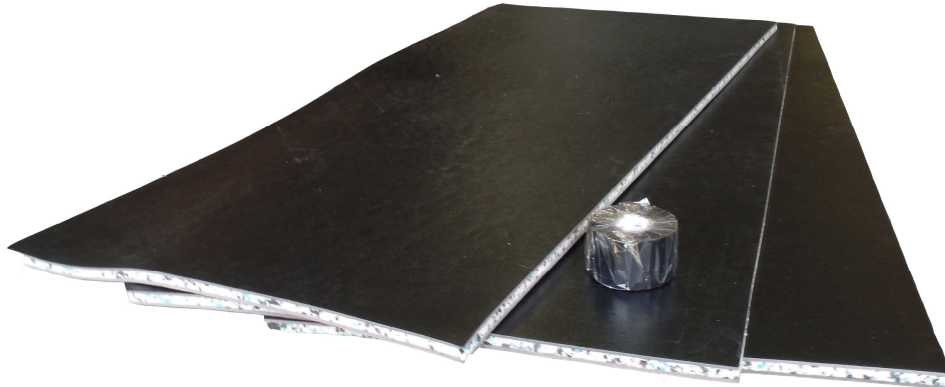

3 x 15mm thick drum kit anti-vibration mats each 1200 x 600mm
1 x Roll 50mm Jointing Tape

Installation instructions

If all three mats are fitted together, they will form a continuous anti-vibration mat 1200mm wide x 1800mm long. The joints should be secured with the Jointing Tape then the drum set anti-vibration mat is ready for use and is big enough to accommodate a traditional drum set. If the anti-vibration mat is for an electric drum set that may want to be smaller, the mat can easily be trimmed with the aid of a sharp Stanley type knife and a straight edge. When cutting the mat, squash it as much as possible beneath the straight edge then make the cut. Several cuts may be required to separate the offcut.

Warning! Any knife can be dangerous so extreme care must be taken when using them. When cutting along a straight edge, make sure any fingers are not overlapping where the cut is to be made otherwise you may end up with shorter fingers.

Once the mat has been prepared, a drum kit can be placed directly on it but it may be preferred to lay tongue and grooved boards on top with the joints glued and with carpet on top to match the décor of the room. Look at the illustration below.



EST. 1969


Crawley Mill, Dry Lane, Witney, Oxfordshire, OX29 9TJ

sales@soundservice.co.uk

VAT NO: GB 434 5018 73 REG NO: 960986

Tel : 01993 704981

Fax : 01993 779569

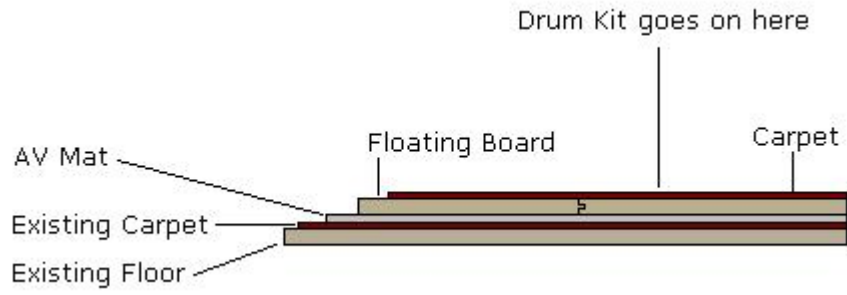

Now you can begin playing in the knowledge that impact noise from pedals are less likely to be heard in adjoining rooms and rooms below.